



www.jvj.com.sg

JVJ USB Flash Disk DVR891 QUICK START GUIDE



COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. JVJ® is registered trademark of JVJ Multimedia Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from JVJ Multimedia Ltd.

Copyright © 2006 JVJ Multimedia Ltd. All rights reserved.

<http://www.jvj.com.sg>



INTRODUCTION

Congratulations on your purchase of this outstanding USB Flash Disk. JVJ DVR891 This device is a high-speed USB Flash Disk that allows you to easily carry and transfer key documents, pictures, music and video clips from one computer to another.

SPECIFICATIONS AND FEATURES:

- Memory: 128MB/256MB/512MB/1GB
- USB Host Interface : USB 2.0
- Support USB 2.0 full-speed transmission.
- Password Protect
- Wood Cover - Friendly to Environment
- JVJ USB Tool Box Software

IMPORTANT SAFETY INSTRUCTIONS

1. Do Not open or attempt to service this product
2. Do Not expose this product to dampness, dust or corrosive liquids.
3. Always Safe Remove this product before disconnect from PC to prevent electric shock.

SYSTEM REQUIREMENT:

- Windows 2000, XP
- Mc OS 10 and Linux (Storage only)
- Free USB port

PACKAGE CONTENTS

The USB Flash Disk JVJ DVR891 package contains the following items:

- One USB Flash Disk DVR891
- One Extended Cable
- Quick Start Guide

If any of the above items are damaged or missing, please contact your dealer immediately.

CONNECTING

Following the steps to properly connect the USB Flash Disk JVJ DVR891 to your computer:

1. Power on your PC or Notebook.
2. Connect the USB Flash Disk JVJ DVR891 to free USB port on your PC or notebook. You can also use the extended cable to connect between the USB Flash Disk JVJ DVR891 and your PC/Notebook.




3. No additional driver installation is required. Driver will be installed automatically, and the USB Flash Disk JVJ DVR891 will be ready for use.

DISCONNECTING

You don't need to shutdown your computer to disconnect the USB Flash Disk, but to avoid losing data you should never remove the device from the USB port while the LED is flashing. If a drive window is open, closed any associated windows before attempting to remove your USB Flash Disk JVJ DVR891.

Use the "Safe to Remove Hardware" hotplug icon in the notification area of the taskbar where you usually see the current time displayed.

1. In the notification area, click on the " Safe to Remove hard ware" hotplug icon.

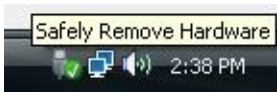

2. Select the device you want to unplug, and then click Stop.
3. When Windows notifies you then it is safe to do so, unplug the USB Flash Disk from your computer



FREE SOFTWARE GIFT

JVJ USB ToolBox

This Valueable Portable Office is a program with many functions. Just load it on your USB-stick and have many useful Tools in one program always at hand.

- Favorites-Import and own linklist
- eMail-Client with addressbook and all common features, runs from the USB-drive
- Password protection
- Backup-management
- Synchronization
- Contacts
- FTP-Client
- File-Tools (to split, shredder, encrypt, zip/rar files easily)
- Explorer and image-viewer (to see pictures)
- Calender with note-function
- Spreed-Sheet
- File-Safe
- Password-Safe
- Notepad and Password-Management
- Shortcut-Management and links to system-tools
- Document-Management on the USB-drive
- Calculator
- To-Do-List
- System-Info
- Misc-Tools (Countdown, Snake, Wetris, ..)



Printed in Singapore