



[www.jvj.com.sg](http://www.jvj.com.sg)

# QUICK START GUIDE

## High-Speed USB Flash Disk

### JVJ X3



## **COPYRIGHT & TRADEMARKS**

Specifications are subject to change without notice. JVJ® is registered trademark of JVJ Multimedia Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from JVJ Multimedia Ltd.

Copyright © 2004 JVJ Multimedia Ltd. All rights reserved.

<http://www.jvj.com.sg>



## **INTRODUCTION**

Congratulations on your purchase of this outstanding USB Flash Disk. JVJ X3 This device is a high-speed USB Flash Disk that allows you to easily carry and transfer key documents, pictures, music and video clips from one computer to another.

## **SPECIFICATIONS AND FEATURES:**

- Memory: 128MB/256MB/512MB
- USB Host Interface : USB 1.1/1.0
- Support USB hi-speed transmission.
- Driver Support Win 98SE
- New designed wooden cover

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Do Not open or attempt to service this product
2. Do Not expose this product to dampness, dust or corrosive liquids.
3. Always Safe Remove this product before disconnect from PC to prevent electric shock.

## **SYSTEM REQUIREMENT:**

- Windows 98, 2000, XP
- Mc OS 10 and Linux (Storage only)
- Free USB port

## **PACKAGE CONTENTS**

The USB Flash Disk JVJ X3 package contains the following items:

- One USB Flash Disk X3
- One Extended Cable
- Quick Start Guide

If any of the above items are damaged or missing, please contact your dealer immediately.

## CONNECTING

Following the steps to properly connect the USB Flash Disk JVJ X3 to your computer:

1. Power on your PC or Notebook.
2. Connect the USB Flash Disk JVJ X3 to free USB port on your PC or notebook. You can also use the extended cable to connect between the USB Flash Disk JVJ X3 and your PC/Notebook.



 
3. With Windows 2000, XP system, no additional driver installation is required. Driver will be installed automatically. and the USB Flash Disk JVJ X3 will be ready for use.
4. With Windows 98 system, you will be asked for driver. Please insert CD Driver and follow the guide on screen. After installing driver, system will reboot if need.

## DISCONNECTING

You don't need to shutdown your computer to disconnect the USB Flash Disk, but to avoid losing data you should never remove the device from the USB port while the LED is flashing. If a drive window is open, closed any associated windows before attempting to remove your USB Flash Disk JVJ X3.

Use the "Safe to Remove Hardware" hotplug icon in the notification area of the taskbar where you usually see the current time displayed.

1. In the notification area, click on the " Safe to Remove hard ware" hotplug icon.



2. Select the device you want to unplug, and then click Stop.
3. When Windows notifies you then it is safe to do so, unplug the USB Flash Disk from your computer



## **FREE SOFTWARE GIFT**

### **Simple Passwords:**

Tired of forgetting passwords for your favorite sites, mails, FTP accounts? Here is one for you, SimplePasswords. Now you can organize all your passwords into categories, add notes and carry it on your USB stick. It's a simple password manager. SimplePasswords encrypts all data with TripleDES block cipher so you don't need to worry about anyone seeing your data.

With Simple Passwords and JVJ X3 you can easily store and manage your passwords.



Printed in Singapore