

QUICK GUIDE JVJ MMX-F3B

Safety notice:


Don't dismantle, assemble or alter the product arbitrarily

Don't use it in an aircraft or where the use of electronic instruments is prohibited.

Don't drop it in water or drop water on it.

Don't leave in Sunlight directly or near heaters for any length of time

Feature:

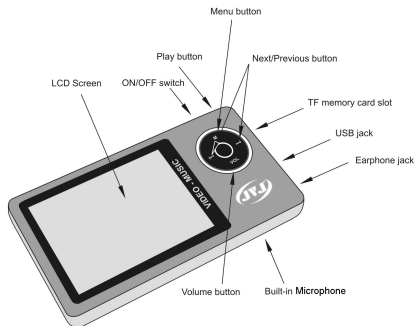

1. Using Multi-codec, can playback MP3 / WMA / WAV audio files
2. Handling all video formats: RMVB / AVI / 3GP / WMV / VOB / FLV / MP4 at 25fps.
3. FM radio receiver / recorder.
4. Voice record function with built-in microphone.
5. Viewing JPEG / GIF and BMP images.
6. Eight-mode equalizer functions: Natural, MSEQ, Rock, Pop, Classic, Jazz, Bass, User EQ.
7. Ebook reading (TXT, LRC files) .
8. Can be used as USB storage.
9. 2.4" TFT LCD with a resolution of 320 x 240
10. Supporting external memory (TF Card) up to 2GB

Basic Operation:

Turn ON (OFF):- Switch ON/OFF switch to ON (OFF) position
- Press and hold PLAY button for 3 second

Main Menu Entry include these functions: *Music - Video - Photo - eBook - Radio - Game - Record - Explorer - Setting.*

To choose any function use NEXT/PREVIOUS buttons to scroll up or down then press M button to accept.

To turn backward to previous screen press VOL button.

1. Music Function:

- The first screen of Music function will show: *Current Play – All Music – Artist – Album – Genre – My Favourite – Record – Dir List – MediaLib Update – Hold Recollection* selecting by press NEXT/PREVIOUS buttons to scroll to desired option then press M button to accept.
- To choose file: Press NEXT/PREVIOUS buttons, then press PLAY button to playback.
- To playback/pause: Press PLAY button.
- While playing:
 - To adjust volume levels: Press VOL button, the speaker icon, will blinks then press NEXT/PREVIOUS buttons.
 - To search in playing song: Press and hold NEXT/PREVIOUS buttons.
 - To skip to NEXT/PREVIOUS songs: Press NEXT/PREVIOUS buttons briefly.

- To call Music Sub Menu press M button. To change any option, press NEXT/PREVIOUS buttons, then press M button to accept. Music Sub Menu includes:
 - *Repeat Mode*: Once – Repeat – All – All Repeat – Intro.
 - *Play Mode*: In Order – Shuffle.
 - *MSEQ*: 3D – Bass – LEQ (preset MSEQ option)
 - *EQ Select*: Normal – MSEQ – Rock – Pop – Classic – Bass – Jazz – User EQ.
 - *User EQ setup*: Press PLAY button to select frequency bar then press NEXT / PREVIOUS buttons to decrease / increase level.
 - *Display*: ID3 – Lyric – Freq Chart – Closed.

2. Video Function:

- To choose file press NEXT/PREVIOUS buttons, then press PLAY button to playback.
- To playback/pause: press PLAY button.
While playing:
 - To adjust volume levels: Press VOL button, the speaker icon will blinks, then press NEXT/PREVIOUS buttons.
 - To search in playing file: Press and hold NEXT/PREVIOUS buttons.
 - To skip to next/previous file: Press NEXT/PREVIOUS buttons briefly.
- To call Video Sub Menu press M button. To change any option, press NEXT/PREVIOUS buttons, then press M button to accept. Video Sub Menu includes:
 - *Select time play*: Press PLAY button to set Hour/Minute then press NEXT / PREVIOUS buttons to change.
 - *LCD Expend Normal / LCD Expend full screen*

3. Photo Function:

- To choose file press NEXT/PREVIOUS buttons, then press M button to view.
- To skip to next/previous file: Press NEXT/PREVIOUS/M/VOL buttons briefly.
- To call Photo Sub Menu press PLAY button (or press and hold M button). To change any option, press NEXT/PREVIOUS buttons, then press M button to accept. Photo Sub Menu includes:
 - *Rotate Right / Left*: rotate the picture.
 - *Zoom in / Zoom out*: in zoom in mode use M/VOL buttons to scroll up/down; NEXT /PREVIOUS buttons to scroll right/left.
 - *Browse*: Turn off – 2 sec – 6 sec – 8 sec set time to automatically advanced to next pictures

4. Ebook Function:

- To choose file: Press NEXT/PREVIOUS buttons, then press M button to read
- To scroll page up / page down: Press NEXT/PREVIOUS buttons
- To call Ebook Sub Menu press M button. To change any option, press NEXT/PREVIOUS buttons to scroll to desired option then press M button to accept. Ebook Sub Menu includes:
 - *Page jump*: Skip to selected page. Using PLAY / NEXT / PREVIOUS buttons to select.
 - *SaveMark*: remark a point to jump to
 - *LoadMark*: jump to pre-selected mark (set by SaveMark)
 - *DelMark*: clear a Save Mark
 - *Set Font / Set Color*

- *Browse Mode:* Auto Mode – Manual Mode: Page up automatically or manually
- *Flip time:* 10 sec - 15 sec - 20 sec - 25 sec - 30 sec: time to wait before paging up
- *Mode:* desktop themes

5. Radio Function:

Caution: To use this function, earphone must be plugged in

- To search channels manually: Press NEXT/PREVIOUS buttons briefly.
- To search channels automatically: Press and hold NEXT/PREVIOUS buttons.
- To adjust volume levels: Press VOL button, the speaker icon will blink, then press NEXT /PREVIOUS buttons.
- To call Radio Sub Menu press M button. To change any option, press NEXT/PREVIOUS buttons to scroll to desired option then press M button to accept. Radio Sub Menu includes:
 - *Search by hand*
 - *Auto search:* the appliance will search and save channels automatically.
 - *Preset Mode:* Press NEXT/PREVIOUS buttons briefly to skip to saved position.
 - *Save channel / Delete channel:* save / delete position
 - *Stereo switch*
 - *Receive area:* Malaysia – Japan – USA – Europe – Campus band
 - *FM record:* Press PLAY button to start / pause recording. Press VOL button to save

6. StopWatch Function: (Other Function)

- Press PLAY button to start / pause, press M button to preset to 0.

7. Game Function: (Tetris game)

- Press M button to start.
- Press PLAY button to play/pause

While playing:

- Press M button to rotate
- Press NEXT/PREVIOUS buttons briefly to move right / left.

8. Record Function:

- Press PLAY button to record / pause. Press VOL button to save. Recording file is saved in RECORD folder.
- To call Record Sub Menu press M button. To change any option, press NEXT /PREVIOUS buttons to scroll to desired option then press M button to accept. Record Sub Menu includes:
 - *Quality*: Low rate – High rate
 - *Volume*: choose volume levels.
 - *Desktop*: choose desktop theme.

9. Explorer Function:

- All files and folder are listed. Press NEXT/PREVIOUS buttons to scroll to desired file or folder then press M button to access.

10. Setting Function:

- Display setting:
 - *Light Time*: 5 sec – 10sec – 15 sec – 20 sec – 25 sec – 30 sec – Always on

- *Brightness*: (five level)
 - *Light Mode*: All Dark – Penumbra.
 - *Display status*: Hide – Display.
- Desktop: desktop theme.
 - Language: (18 languages)
 - System information
 - AutoShut time
 - SleepShut time